

## Brzo uklanjanje mrlja od boja i šablona

**NOVO** Jednokomponentni sistem

**mokro na mokro**

Dvokomponentni sistem

### Antistain Gel XL



Kadicom ili četkom naneti na obe strane mokrog sita.



\*Ostaviti da deluje na situ 10 minuta.




Isprati sito blagim mlazom vode




Isprati obe strane sita jakim mlazom vode.

### Antistain Paste

& Xtend Screen Cleaner

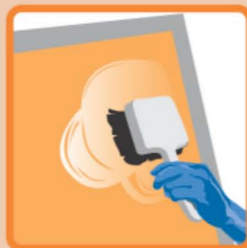

Naneti Xtend Screen Cleaner na situ.

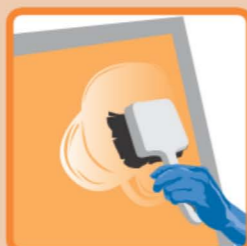

Naneti Antistain Paste na obe strane sita, mešajući obe hemikalije mekom četkom.



\*Ostaviti da deluje na situ 15 minuta.



Isprati sito blagim mlazom vode



Isprati obe strane sita jakim mlazom vode.

## Uklanjanje teških mrlja od boje i šablona

**mokro na suho**

### Antistain Ultra


& Xtend Screen Cleaner/Antistain Cream



Kadicom ili četkom naneti Antistain Ultra na obe strane sita. Za optimalno delovanje sito treba osušiti pre nanošenja hemikalije.



Ostaviti sito da se u potpunosti osuši. Sušenje fenom (niska temperatura) ubrzava i poboljšava proces čišćenja.

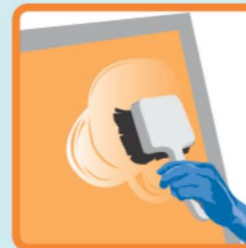

Sa obe strane sita naneti četkom Xtend Screen Cleaner ili Antistain Cream direktno preko suvog Antistain Ultra.



**Xtend Screen Cleaner**  
Ostaviti 2 - 3 minute da reaguje.



**Antistain Cream**  
Ostaviti 30 minuta da reaguje.



Isprati obe strane sita jakim mlazom vode.

## Prevenција

**post print**

### Screen Gel Clear



Neposredno nakon štampe ukloniti višak boje sa sita.



Kadicom naneti Screen Gel Clear na situ. Ovaj postupak sprečava zasušivanje ostataka boje na situ do trenutka čišćenja.



Screen Gel Clear može ostati na situ do 12 časova.



Isprati vodom, te očistiti sito jednim od standardnih postupaka.

**XTEND**  
Screen Recovery System

\* Duže vreme od preporučenog može štetiti sintetičkim sitima